
Business Class Network Interface Device (NID)

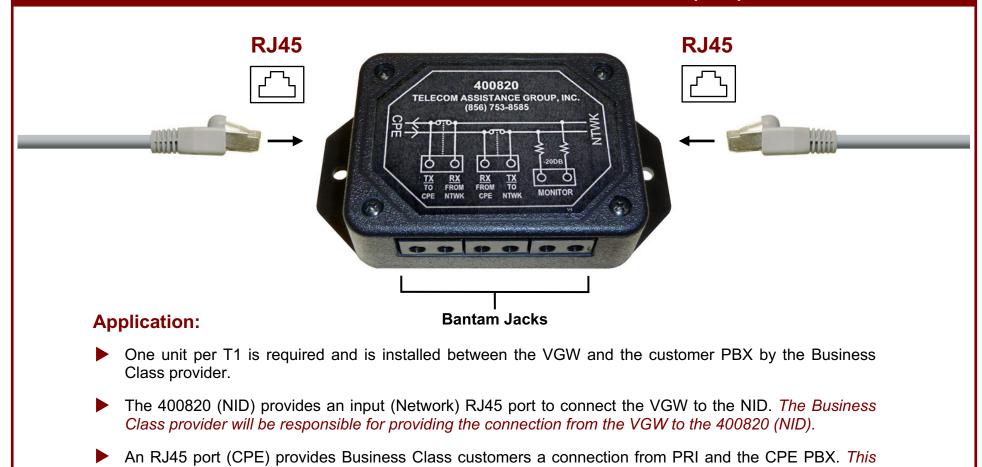

- connection is the customer's responsibility.
- Bantam test ports are located on the bottom of the 400820 (NID) for future maintenance and performance testing connected to the preferred test set.

