


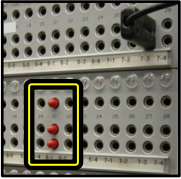

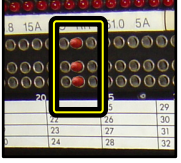

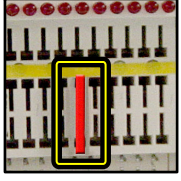

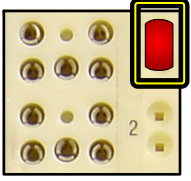
SS7 Audit Kit

SS7-KIT

FTR UPN # SS7-KIT




(SS7-KIT includes all contents shown below & carrying case)

Dummy Plugs

QTY / PN # / DESC.	(not to scale)	
(20) # 310DP 310 Dummy Plug		
(20) # 210DP Bantam Dummy Plug	 FTR UPN # 210DP-KIT50 (QTY of 50)	
(8) # 800DP 800 DSX Dummy Plug		
(10) # 453ADP 453A Dummy Plug		






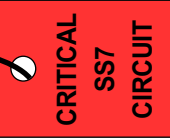
- Plugs into vacant 310 (PN # 310DP), bantam (PN # 210DP), 800 DSX (PN # 800DP) or 453A (PN # 453ADP) jacks
- Used to prevent accidental insertion / disruption of the circuit
- Identifies special circuits (i.e. SS7 circuits)

Protective Caps

QTY / PN #	Description	(not to scale)
(50) # SS7-2P	SS7 2 Pin Cap (1/2)	
(50) # SS7-3P	SS7 3 Pin Cap (5/8)	
(24) # SS7-6P	SS7 6 Pin Cap (1 3/8)	

- Placed over wire wrap terminals at MDF Frames
- Identifies special circuits (i.e. SS7 circuits)

Labels & Tags

FTR UPN #	Description / QTY	(approx. size)
# SS7-LB1	SS7 Labels, (SM) (QTY of 50)	
# SS7-LB2	SS7 Labels, Rectangle (SM) (QTY of 50)	
# SS7-LB3	SS7 Labels, Rectangle (LG) (QTY of 25)	
# SS7-LBL3B	SS7 Labels, Rectangle (XLG) (QTY of 25)	
# SS7-TAG	SS7 Threaded Tag (QTY of 50)	 

150 Cooper Rd. (F-15)
W. Berlin, NJ 08091

www.tagcords.com

Telecom Assistance Group

Telephone: (856) 753-8585

Fax: (856) 768-7645