



# VZ Switch Terminal Missing Verizon Bay Location Code Label

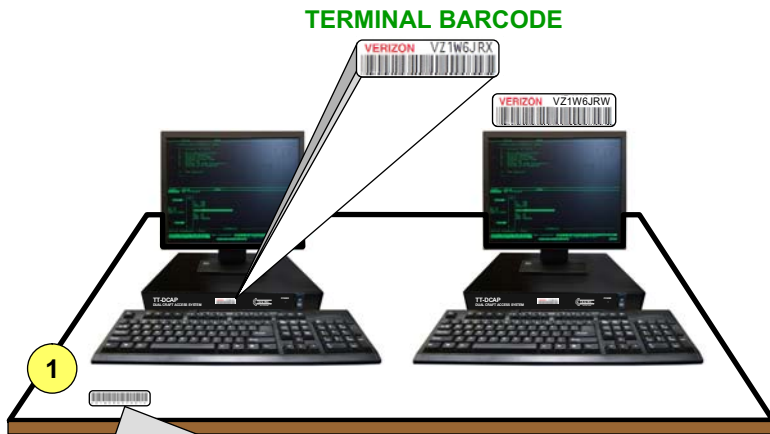

**WORK AREA #1**

**BAY LOCATION LABEL**

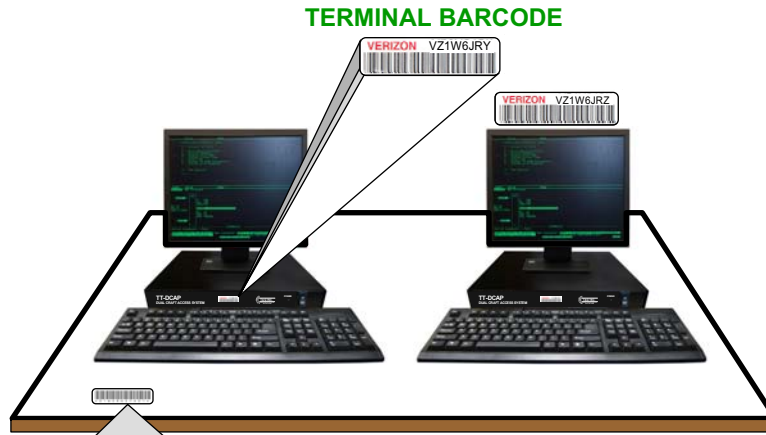

**WORK AREA #2**



**BAY LOCATION LABEL FOR AN ADDITIONAL SWITCH ON THE SAME FLOOR**

- 1 If unable to locate an existing label, place a new label on the desk.
  - 1a The label should be 01WORKSTA01 (note - 1st 01 is floor) - **Only place (1) label for each work area.**
  - 1b If there is a second switch (with a different MAP room) on the same floor, then label that area as 01WORKSTA02.
- 2 Record the data from the new BAY location label(s) on the barcode sheet (510210A-003).
- 3 Data from TAG form will be entered into scanner & uploaded to the CVT help desk.



## TAG SWITCH TERMINAL INSTALLATION COMPLETION FORM

CLLI CODE: <u>CTSQPACTDSØ</u>	DATE: <u>4/26/13</u>	INITIAL: <u>JM</u>
FLOOR: <u>Ø1</u>		
TEO #: <u>BHxxxxxx1</u>	CCR# <u>1234567</u>	
<b>TERMINAL BARCODES:</b> <b>INSTALLED</b>		<b>REMOVED</b>
1 <u>VZ1W6JRX</u>	2	1 _____
Floor / Bay Location of terminal: <u>Ø1WORKSTAØ1</u>		Floor / Bay Location of terminal: _____
2 <u>VZ1W6JRW</u>	2	2 _____
Floor / Bay Location of terminal: _____		Floor / Bay Location of terminal: _____
3 <u>VZ1W6JRY</u>	3	3 _____
Floor / Bay Location of terminal: <u>Ø1WORKSTAØ2</u>		Floor / Bay Location of terminal: _____
4 <u>VZ1W6JRZ</u>	4	4 _____
Floor / Bay Location of terminal: _____		Floor / Bay Location of terminal: _____
Qty. of Current Loop Adapters used: _____		