



1. Loop toward Central Office (CO)

Plug Bantam to Bantam cord into Side 1 In and Side 2 Out

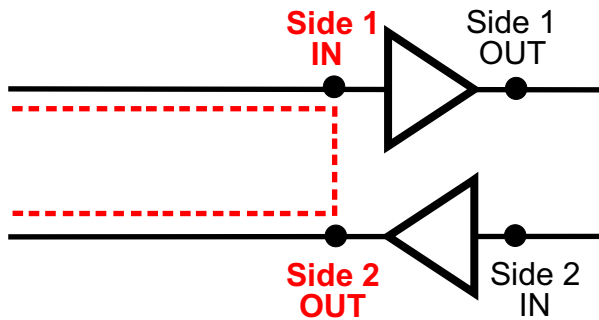


2. Loop toward Customer Premise (CPE)

Plug Bantam to Bantam cord into Side 1 Out and Side 2 In

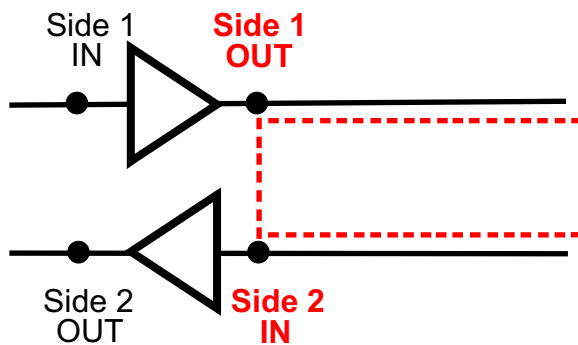

3. Cut Thru

Plug Bantam to Bantam cord into Side 1 In and Side 1 Out & Side 2 In and Side 2 Out

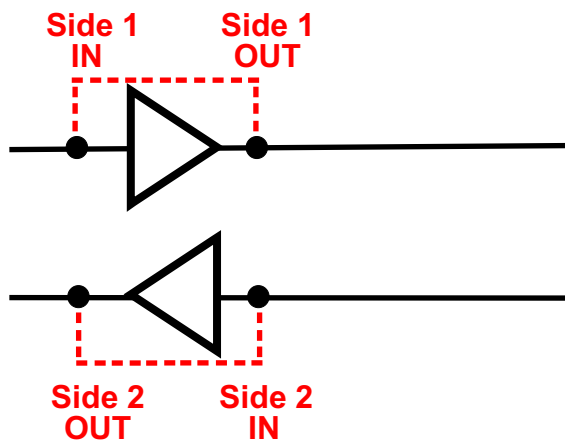

150 Cooper Rd. (F-15)
W. Berlin, NJ 08091

www.tagcords.com
Telecom Assistance Group

Telephone: (856) 753-8585
Fax: (856) 768-7645